

SWR /RF METER LARGE LCD

- **User Manual**

Version 1.0

12/01/2023



SPECIFICATIONS

- **FREQUENCY RANGE 1-54MHZ**
- **NUMERICAL AND BARGRAPH DISPLAY**
- **SIMULTANEOUS POWER AND SWR DISPLAY**
- **AVG/PEP**
- **LINEAR AMPLIFIER PROTECTION IN CASE SWR >2:1**
- **1-2000W (IF YOU NEED OTHER MEASUREMENTS CONTACT ME)**
- **FULL AUTOMATIC MEASUREMENTS**
- **BIG LCD DISPLAY 98X22mm**
- **DIAMENSIONS 140X120X95mm**
- **INCLUDED PREPARED WIRE WITH PLUG FOR DC POWER SUPPLY**

DESCRIPTION

This swr/rf meter is fully automatic and you do not need to adjust it. It comes fully calibrated and you only need to connect it with your Antenna and your transmitter.

Only 2 switches located at front panel for your convenience.

One switch to turn it on/off

One switch to choose between AVG & PEP.

At back panel there are two so239 connectors.

"ANT" is for connecting your Antenna system and "TRX" is for connecting your transmitter.

Also you can connect rca's to protect your amplifier when $swr > 2.0$



This item is covered by lifetime warranty.

Thank you for your purchase.

